



# COMPOSITE DECKING INSTALLATION GUIDE

1. Fix starter/end clips along one perimeter edge with 19mm screws (FIG 6)
2. Slide first deck board into the clips and secure the other side of the board using plastic t-clips and 30mm black screw directly through fixing channel of joist

 Please note: Achieve completely uniform board gaps by ensuring all boards are firmly pressed against t-clips

3. Direct fix through board edge at the centre of each board using 30mm screw, which will help ensure equal board expansion and contraction in all directions (FIG 7)

4. Tighten clips once next boards are in place (FIG 8)

 Please note: where boards meet end-on-end, ensure that a 5mm gap is left between board ends to allow for natural expansion of boards

5. Repeat this process until the whole area is decked (FIG 9)
6. Install starter/end clips along edge prior to installing final two boards, and slot boards into place, before tightening clip as shown (FIG 10)



FIG 6



FIG 7

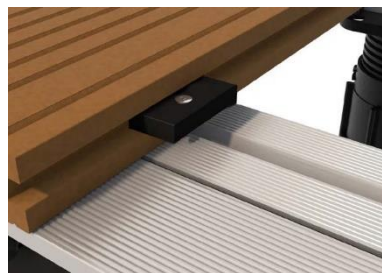


FIG 8



FIG 9



FIG 10